

Salice Wind

Magnetic Push


- Magnetic push catch for use with Salice Push-to-open systems including Salice Wind
- To achieve best results use both magnetic catch and adjustable catch plate
- Catch: Ø10mm x 40mm long
- Adjustable catch plate: Ø15mm x 11mm long

Part No.	Finish	Description
SAL.DPMSNG	Grey	Catch
SAL.DP39XXG	Grey	Plate



Application of the standard magnetic catch

Drill a hole Ø 10 mm and min. 40 mm depth in the top, the side or the base panel of the cabinet.
Insert the release device into the hole.

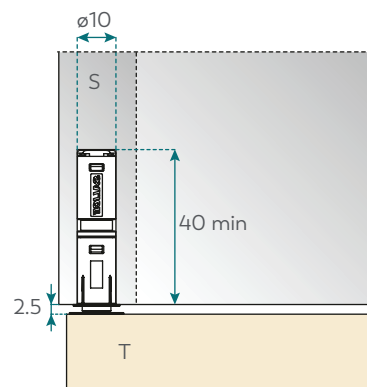

Inserting the adjustable magnetic catch

When using the magnetic catch and release latch together, the holding strength of the door against the cabinet is considerably increased (30%), helping to avoid accidental opening. Installation requires a drilled hole Ø15mm and 11mm deep.
Depth adjustment from -0.5 mm to +2.5 mm.

