


A Furnware Brand


## Storg Elska Gourmet Pantry

ST22PGP.TL400.CPWH ST22PGP.TL450.CPWH ST22PGP.TL500.CPWH

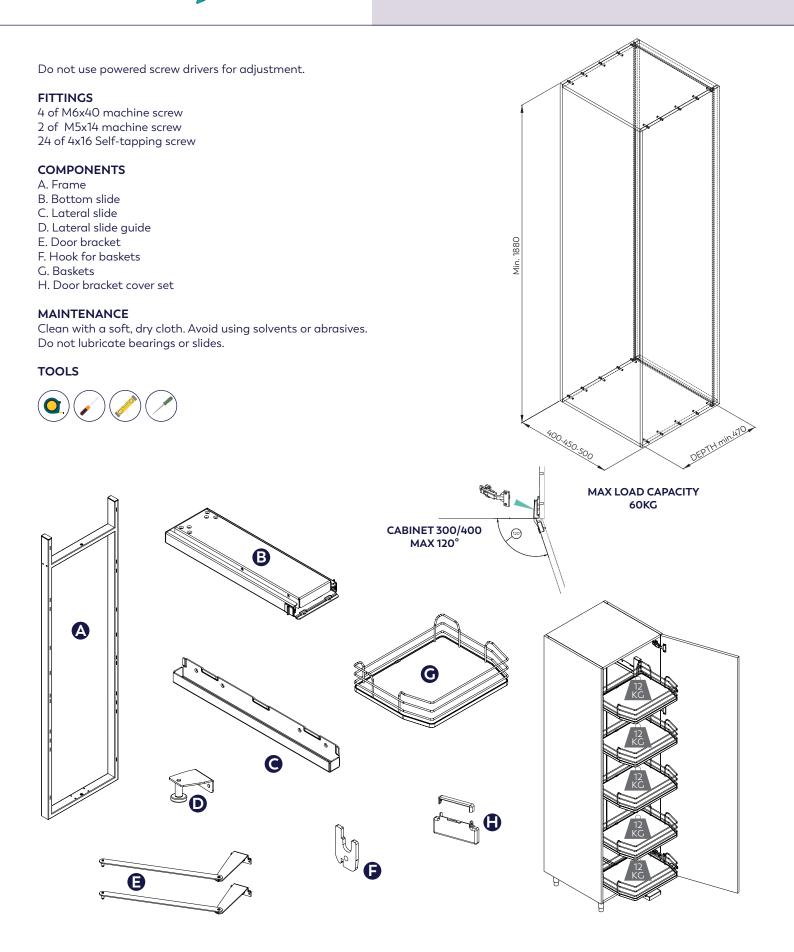

2 of M5x14 machine screw

Choose the door opening direction and then screw the lateral slide guide (D) to the frame (A) by using the two screws M5x14, so that the guide is on the hinge side of the frame.

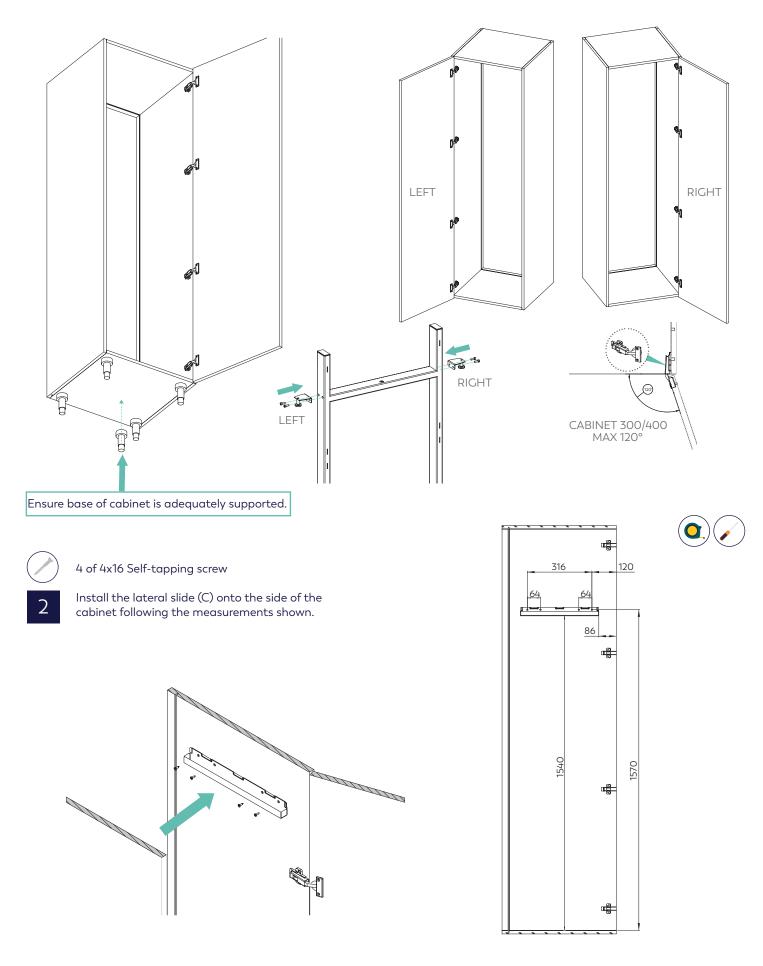



6 of 4x16 Self-tapping screw

3



Fix the bottom slide (B) on the bottom of the cabinet following the dimensions shown on the hinge side of the cabinet.

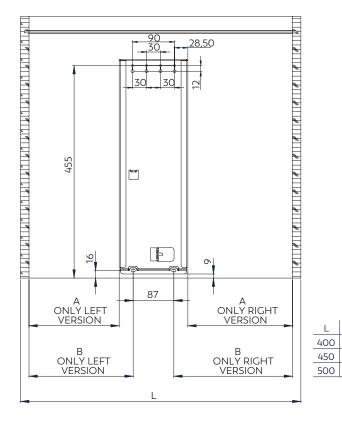


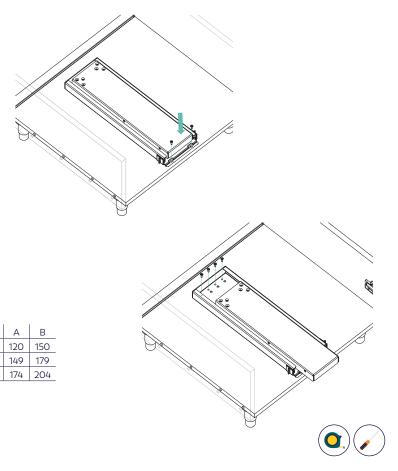

4 of M6x40 machine screw

4

Insert the frame (A) and fix it by using the four screws M6x40, as shown.

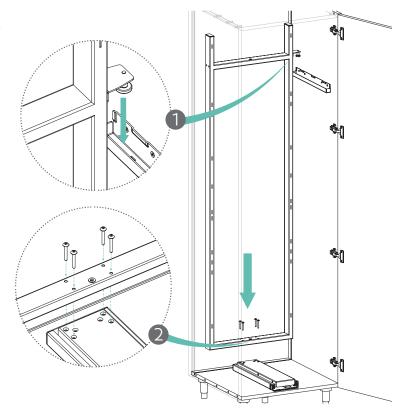

6 of 4x16 Self-tapping screw

5

Install the door brackets (E) on the door following the dimensions shown and clip them into the frame (A). Install the covers (H), as shown in the pictures.

